

Programming of TOP432NA Remote Controls

This procedure will allow you to copy your old compatible* remote controls from the CAME range to new or replacement 432NA types. Please read though the following steps two or three times to familiarise yourself with the procedure.

You should have both remote controls to hand before starting.


Step 1.

Simultaneously press both buttons on the new or replacement remote you wish to program & hold them in for 10 seconds; the LED will start to flash rapidly. Whilst the LED is flashing rapidly, go to step 2.



Step 2.

With the LED flashing rapidly, press the button you want to use for your system as button 1. (left or right button) The LED will become constantly lit for 10 seconds. Whilst the LED is constantly lit, go to Step 3.

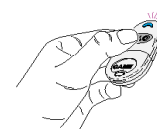

Step 3.

Place the tip of the old remote within 10mm of the rear of the new one. Now press the button on the old unit you want to copy into the replacement.



The LED on the new remote will flash 3 times to indicate that the code has successfully transferred from Old to new remote.

Repeat Steps 1,2 & 3 for second button programming.

Compatible remotes: TOP432M – 434M – 432A – 434A – 432S – 432SA – 434NA – 434MA